

IMPORTANT RUNNER ASSEMBLY INSTRUCTIONS

FAILURE TO FOLLOW INSTRUCTIONS COULD RESULT IN PERSONAL INJURY.

USE CAUTION WHEN NAILING ONTO PAINTED SURFACES TO AVOID DAMAGE TO THE PAINT.

IF ADDITIONAL HELP IS NEEDED PLEASE CALL 704-872-7625.

USE OF SAFETY GLASSES IS RECOMMENDED.

1. Invert rocker on a solid surface with padding between surface and chair.
2. Fit rocker runners onto tenons at bottom legs of rocker. The front of rocker runner is the end where the hole is closest to the end of the runner.
3. Using little force, tap the rocker runner front first and then back. Repeat front to back until you feel you have a good fit and the tenon is halfway into the holes in the rocker runner.
4. At this point, using force, hammer rocker runners until tenons are fitted down into the rocker runner. As the runners are oak, force will not hurt them.
5. After runners are fitted properly onto all legs use the stainless nails provided to secure runners to tenons. Turn the rocker onto its side and carefully hammer in the nails from the inside of the rocker runners into the tenon. Pre-drilling the holes will help to make attachment easier and help prevent damage to painted surfaces.